


FOOTBRACE #03810 INSTALLATION INSTRUCTIONS

1. Remove any existing footbrace and all hardware.
2. Clean hull around the footbrace installation area, inside and out.
3. Measure the distance between the existing holes in the kayak hull. Measure from the center of each hole.

If distance between existing holes measures 14 ½ in., Proceed to Step 4.

If holes do not measure 14 ½ in., you may need to drill a new hole in each side of the boat and fill the old holes. A SmartTrack Vertical Adjustment Kit is recommended as an alternative method to drilling new holes. See SmartTrack Vertical Adjustment Kit for more details.

4. Install the Footbrace using the 1/4 in. mounting screws included with the Footbrace. The neoprene washers, included with the screws, washers should be placed between the hull and the Footbrace. Tighten the screws enough to compress the washers between the hull and the Footbrace side rail.

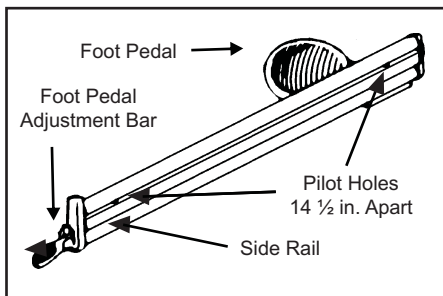

SmartTrack™
CONTROL SYSTEM
- www.smart-tracker.com -

©2006 SmartTrack, LLC. PN 33-134